



# HOW TO INSTALL THIS SINGLE OR DOUBLE CYLINDER ENTRANCE HANDLE LOCKSET

**1** MARK DOOR &  
BORE HOLES

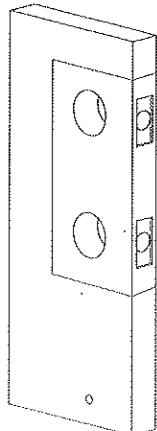


- Fold template over edge of door, mark site 60mm(2 3/8") or 70mm(2 3/4") of holes.
- Bore a Ø54mm(2 1/8") a Ø41mm(1 5/8") two Ø25mm(1") and a Ø8mm(5/16") holes through door.
- Cut two 58×26×3mm(2 9/32"×1"×1/8") base.

**2** INSTALL LATCH

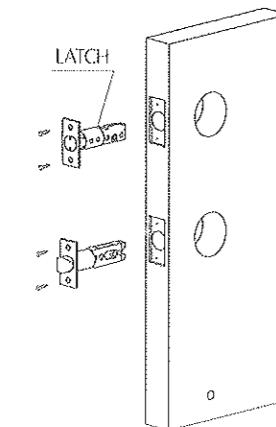


- Adjustable latch of 60mm(2 3/8") or 70mm(2 3/4") backset.
- Push the deadbolt inward keeping the arrow sight in deadbolt always upward.

**3** INSTALL  
OUTSIDE HANDLE

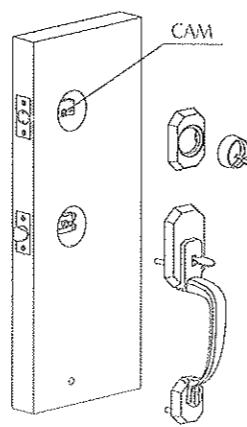


- Operating tail in outside cylinder insert Into the cam horizontally.

**4** INSTALL INSIDE HANDLE  
(INSIDE KNOB/LEVER)

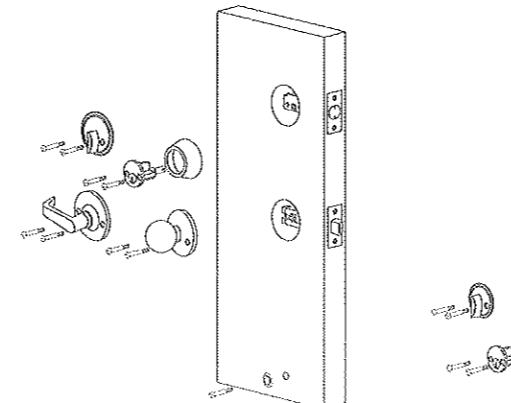


- Operating tail in inside cylinder insert Into the cam vertically.


**5** INSTALL STRIKE

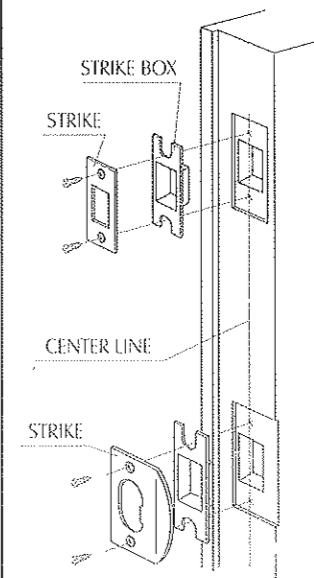

INSTRUCTION FOR ADJUSTABLE LATCH



The cam is pushed fully to the right for 70mm(2 3/4") backset. (During the adjustment, keeping two teeth of the cam to forward always.)



Press the end of deadbolt, turn the latch cover pull or push, make backset become 70mm(2 3/4") or 60mm(2 3/8").